

Presto

by TOWER

PT27028WHT

3-in-1 Sandwich Maker



Call us first, we can help.

With advice, spares and returns.

Visit our website:
towerhousewares.co.uk

Call: +44 (0)333 220 6066
(8.30am to 6.00pm Monday-Friday)

2* YEAR
GUARANTEE



GREAT BRITISH
DESIGN SINCE 1912

SAFETY AND INSTRUCTION MANUAL

PLEASE READ CAREFULLY

*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.

Specifications:

This box contains:

Instruction Manual
3-in-1 Sandwich Maker
Sandwich plate
Grill plate
Waffle plate

1. Sandwich cooking plate
2. Grill cooking plate
3. Waffle cooking plate
4. Power/Ready indicator lights
5. Safety catch
6. Handle



Technical Data:

Description:	3 in 1 Sandwich Maker
Model:	PT27028WHT
Rated Voltage:	220-240V~
Frequency:	50/60Hz
Power Consumption:	800W


Documentation

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
1935/2004/EC	Materials & Articles in Contact With Food (LFGB section 30 & 31).
2009/125/EC	Eco-Design of Energy Related Products.

RK Wholesale LTD Quality Assurance, United Kingdom.


Wiring Safety for UK Use Only

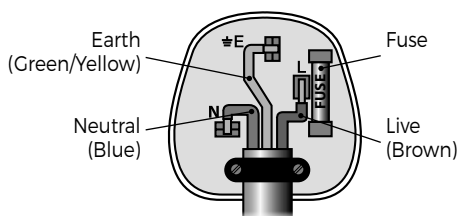

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L] Green/Yellow [EARTH] 

Plug Fitting Details (Where Applicable).

The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This appliance **MUST** be earthed!

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Important Safety Information:

Please read these notes carefully **BEFORE** using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- Do not carry the appliance by the power cord.
- Do not use any extension cord with this appliance.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off and unplug before fitting or removing tools/attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.

- Do not use the appliance outdoors.
- High temperatures are present during operation.
- Only touch the handles on the unit.
- This appliance can produce steam as part of the cooking process. Avoid contact with steam escaping from the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Extreme caution must be used when moving an appliance that produces hot oil or other hot liquids from the cooking process.
- Bread, oil, and other foods may burn. Don't use the Sandwich Maker near or below curtains or other combustible materials, and watch it while in use.
- Don't wrap food in plastic film, polythene bags, or metal foil. You'll damage the Sandwich Maker, and you may cause a fire hazard.
- Keep the Sandwich Maker and the cable away from hotplates, hobs or burners.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team: **+44 (0) 333 220 6066**



Before First Use:

Read all instructions and safety information carefully before first use. Please retain this information for future reference.

1. Clean the cooking plates with a damp cloth or sponge.
2. Slightly grease the cooking plates with a little butter or cooking oil.
3. Plug in the sandwich maker and heat up the plates until the green Ready to Cook indicator light goes out. The sandwich maker is now ready for use.

Note: Initially, the appliance may release a slight harmless odour and smoke. This is a normal occurrence caused by the initial heating of the heating elements and should not re-occur.

Switching the Cooking Plates:

This unit is equipped with detachable, interchangeable grill plates, allowing for a variety of toasted snacks to be prepared, from sandwiches to waffles and paninis.

- To detach the grill plates from the unit, press down on the plate locking latches and pull them backwards until each plate detaches from the main body of the unit.
- To insert or re-insert a grill plate into the unit, align the 2 small tabs on the underside of each plate with the 2 corresponding notches on the body of the unit. Once the two parts are aligned, press down on the plate locking latches and pull them backwards to release the lock. When the lock is released, push the tabs into the notches until they slot in. Once the tabs are in place, push the top part of the plate into the plate cavity until it clicks into place.

Using the Sandwich Maker:

- Put the mains plug into the wall socket, ensuring the correct cooking plates are attached. Refer to the 'Switching the Grill Plates' section above for instructions on how to remove and change the cooking plates.
- The red power light and green power light will both illuminate to show that the sandwich maker is heating.
- While the sandwich maker is pre-heating, prepare the desired type of snacks - sandwiches, paninis or waffles. Refer to the corresponding sections below for detailed instructions on how to prepare each type of snack.
- Wait until the green indicator light goes out. The sandwich maker is then at the correct temperature for use.
- Lower the upper cooking plate carefully until the sandwich maker is tightly clamped.
- Lock the safety catch to secure the grill plates into place. The cooking process will now begin.
- Open the sandwich maker after 3-6 minutes and check whether the food is sufficiently cooked. The cooking time required for each snack depends on the type of food, fillings and even personal taste.
- Use a non-metallic utensil (e.g. a wooden spatula) to remove the toasted snack. Do not use sharp or abrasive kitchen utensils.
- Be careful when removing the snacks, as the fillings will be quite hot.
- Allow to cool for a few minutes before enjoying.
- Unplug the sandwich maker from the wall socket after use.

Note: During the cooking process, the red indicator light will periodically turn itself on and off, as the thermostat keeps the sandwich maker at the proper baking temperature.

CAUTION! NEVER use the appliance in the open position.

CAUTION! The cooking surface is hot; handle with care.

Making Sandwiches:

Tip: To obtain an even golden brown result, you can slightly butter the side of the bread in contact with the plate.

- Lay the slices of bread on the lower cooking plate buttered side down. Place the fillings inside and cover them with the second slice of bread, buttered side up. You can toast only one sandwich if you wish. For optimal result, fillings should be placed well within the sandwich slices.

Making Paninis:

Tip: To obtain an even golden brown result, you can slightly butter the side of the bread in contact with the plate.

- Lay the slices of bread on the lower cooking plate with the crusty side down. Place the fillings inside and cover them with the second slice of bread, crusty side up. You can toast only one panini if you wish. For optimal result, fillings should be placed well within the panini slices.

Making Waffles:

- Prepare your batter using any popular recipe.
- Lift the safety catch and open the sandwich maker.
- Carefully pour the batter onto each of the two cooking plates, taking care to prevent spillages.



Note: Batter tends to expand during the cooking process, and may spill from the cooking plates if they have been overfilled. To prevent this from happening, we recommend filling the cooking plates to no more than 3/4 full, so that the batter has room to expand as it cooks.

- The normal cooking time for waffles is between 3-6 minutes for each waffle.

Tips:

- Always preheat your sandwich maker fully.
- Ensure the lid of the sandwich maker is down whilst preheating.
- Butter, margarine and olive oil can all be used to coat the outside of your bread. Light/Low fat versions of margarines are not recommended as they do not withstand heat.
- Fillings: Try to use canned or pre-cooked fruit as fresh fruit may give off excessive juices when heated. Be careful when biting into toasted sandwiches containing fillings such as cheese and tomato or jam as they retain heat and can burn if eaten too quickly.
- Processed cheeses tend to 'run' under higher temperatures.
- Pat moist ingredients (such as sliced tomatoes and fruits) dry before adding to your sandwich.
- Due to the non-stick cooking plates, it is not necessary to use any butter or margarine on the outside of your toasted snacks.
- The grill is ideal for toasting most types of bread (white, wholemeal, kibbled wheat, wholegrain etc), as well as artisan breads (Focaccia, Panini, Turkish bread etc). Raisin bread, brioche or other sweet breads which contain high sugar content will tend to brown quicker.
- The sandwich maker is ideal for toasting plain breads and Turkish bread, without any fillings or spreads. Try toasting Turkish bread with jams for a great alternative to standard breads at breakfast.
- Vegetables can be cooked on skewers, or straight on to the grill. If you are using bamboo skewers, be sure to soak them in water first. Wash and dry vegetables that you wish to use. Vegetables such as mushrooms and asparagus can be cooked whole on the grill pan. Grill vegetables until they are tender and lightly charred all over. Parboil potatoes, carrots and beets before grilling. Dry them off and brush with oil, then grill. Vegetables such as courgette and aubergine need to be brushed lightly with oil before grilling. Bell peppers don't require any oil.

Troubleshooting:

Questions	Answers
Do the indicator lights show when my sandwich is done?	No. The indicator lights only indicate power, and that the snack maker has reached the correct temperature. Ensure you do not leave the snack maker unattended during use.
How long will it take to make a toasted sandwich?	Generally the sandwiches will be ready approximately 3 – 6 minutes after adding them to the snack maker, depending on your preference. We recommend toasting your sandwiches for around five minutes.
Why are my fillings spilling over during cooking?	You may have added too many fillings to your sandwiches. Ensure that no fillings are 'overflowing' when you add the sandwich to the snack maker. Fillings such as cheese and jam reach very high temperatures when heated and can spill over.

Cleaning & Care:

- This appliance requires little maintenance. It contains no user serviceable parts.
- Do not try to repair it yourself. Refer it to qualified personnel if servicing needed.
- Always unplug the sandwich maker from the power source and wait until it cools down before cleaning.
- Dry the plates with a paper towel to absorb excess oil. Brush crumbs from the grooves, and wipe them with a damp cloth and mild soap.
- Never immerse in water. Avoid using scratching or sharp utensils, as they will scratch the non-stick surface.
- Do not use cleansers or oven cleaners on the heating plates.
- Use a damp cloth with mild soap to clean the handle and outer surfaces.
- Should any filling be difficult to remove, pour a little cooking oil onto the plate and wipe off after 5 minutes, when the filling has softened.

Storage:

To store your appliance:

1. Unplug the power cord from the power outlet and clean as above.
2. After cleaning, allow the appliance to dry fully before using again. Do not use the appliance if damp. Ensure the appliance is completely clean and dry before storing.
3. Store on a flat, dry, level surface, preferably in its original packaging, and out of reach of children.

Presto by TOWER

thank you!

We hope you enjoy your appliance for many years.

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

The product must be returned to the retailer with proof of purchase or a receipt. The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team on:

+44 (0) 333 220 6066

